

MOTORCYCLE LIFT 1000LBS

OWNER'S MANUAL



WARNING:

Read carefully and understand all ASSEMBLY AND OPERATION INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

This machine is designed for certain applications only. We strongly recommend this machine not be modified and/or used for any application other than for which it was designed.

TECHNICAL SPECIFICATIONS

Max. Load Capacity: 1000LBS

Max. Lift Height: 780mm

Min. Lift Height: 195mm

Platform Dimensions:1800*600mm

SAFETY WARNINGS AND PRECAUTIONS

- 1.Study, understand, and follow all instructions before operating this device.
- 2.Do not exceed rated capacity. Be aware of dynamic loading! Bouncing or dropping the load suddenly may briefly create excess load causing product failure.
- 3.Use only on hard, level surfaces.
- 4.Center load on lift platform.
- 5.Before moving, lower the load to lowest possible valve.
- 6.Secure load with appropriate restraint device.
- 7.Do not adjust safety valve.
- 8.Wear ANSI-approved safety goggles, heavy-duty work gloves and safety shoes during use.
- 9.Keep clear of load while lifting, moving and lowering.
- 10.Lower load slowly.
- 11.Do not use for aircraft purposes.
- 12.Inspect before every use; do not use if parts are loose or damaged.
- 13.Keep work area clean and well lit.Cluttered or dark areas invite accidents.
- 14.Keep children and bystanders away while operating. Distractions can cause you to lose control.
- 15.Stay alert. Watch what you are doing, and use common sense when operating. Do not

use while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating may result in serious personal injury.

16.Store idle lifts out of the reach of children and do not allow persons unfamiliar with the lift or these instructions to operate it. Lifts are dangerous in the hands of untrained users.

17.Have your lift serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the lift is maintained.

18.Maintain labels and namplates on the lift. These carry important information.

19.Read lifting requirements in service manual of the motorcycle being lifted.


20.Do not allow anyone on the lift or the motorcycle

21.Raise Casters off the ground to prevent movement before loading, unloading, raising, or lowering.

22.Before lowering, remove all tools and equipment from under lift.

23.Maintenance,if is recommended that an annual inspection of the tool be made and that any defective parts, decals, or warning labels be replaced with manufacturer's specified parts.

1000LB MOTORCYCLE LIFT

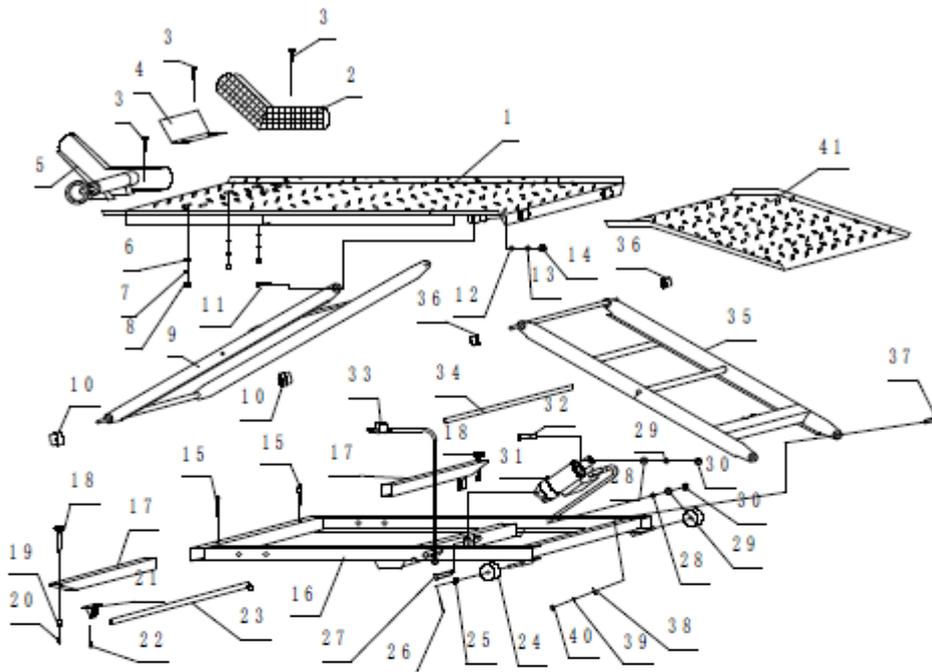

PARTS LIST:

Ref#	DESCRIPTION	QTY	Ref#	DESCRIPTION	QTY
1	Platform	1	22	Bolt M6x12	8
2	Fixing Vise	1	23	Safety Handle	1
3	Hex Bolt M10X20	10	24	Wheel	2
4	Fender	1	25	Flat WasherΦ12	2
5	Movable Vise	1	26	Bolt	2
6	Flat WasherΦ10	10	27	Hex Bolt M16X90	1
7	Spring WasherΦ10	10	28	Flat WasherΦ16	2
8	Hex Nut M10	10	29	Spring WasherΦ16	2
9	Lifting Arm	1	30	Hex Nut M16	2
10	Chain Wheel	2	31	Hydraulic Ram	1
11	HexBolt M12x45	2	32	Hex Bolt M16X80	1
12	Flat WasherΦ12	2	33	Switch	1
13	Spring WasherΦ12	2	34	Middle Shaft	1
14	Hex Nut M12	2	35	Rear Lifting Arm	1
15	Bolt	2	36	Upper Wheel	2
16	Base Frame	1	37	Hex Bolt M16x45	2
17	Adjustment	2	38	Flat WasherΦ16	2
18	Support Bolt	2	39	Spring WasherΦ16	2
19	Support Base	2	40	Hex Nut M16	2
20	Hex Bolt M6X20	2	41	Leading Plate	1
21	Universal Wheel	2	42		